














Cleaning Protocol for MIL-PRF-24635 Type V and VI Exterior Topcoats

Preparation


<p>Review provided instructions, MSDSs, and NMCPHC HHA.</p> 	<p>Ensure you are equipped with the proper PPE.</p> <ul style="list-style-type: none">  Splash Goggles  Neoprene Gloves  Long Sleeved Clothing 	<p>Fill two utility pails with clean fresh water.</p> 	<p>Test product in a small inconspicuous area.</p>  <p>If color of coating is affected, do not use.</p>
---	--	--	--

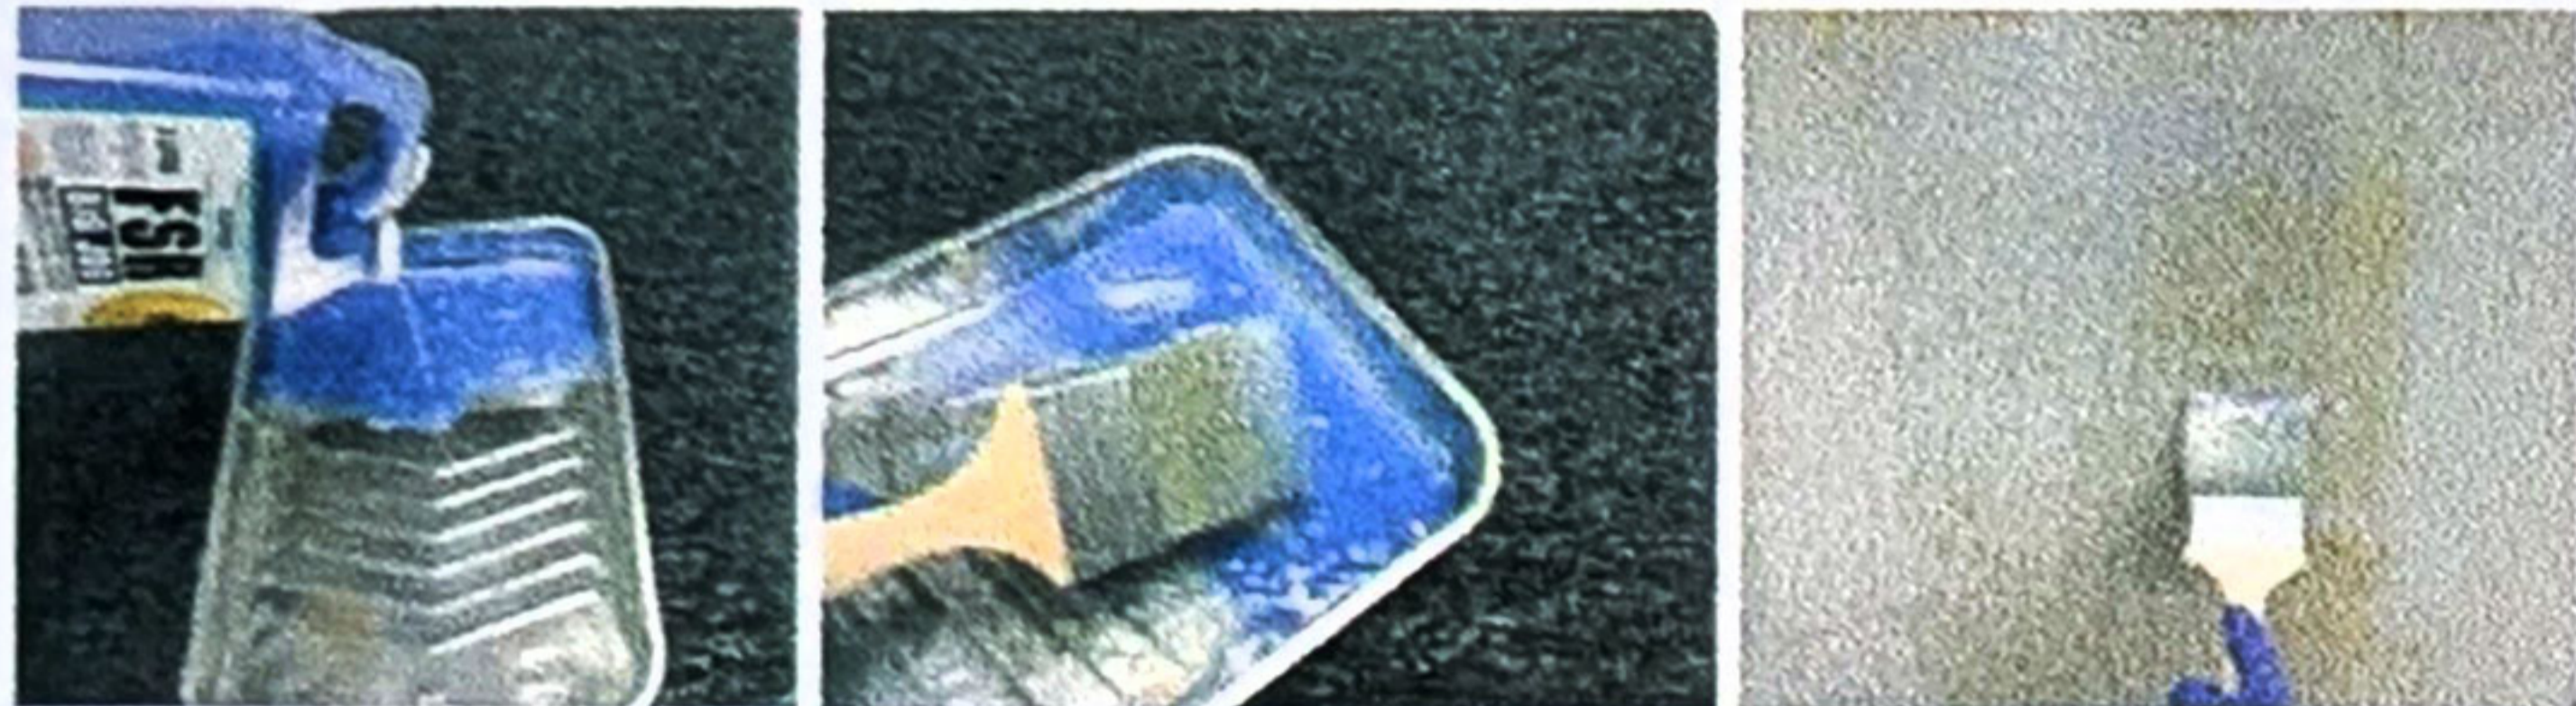Cleaning Procedure

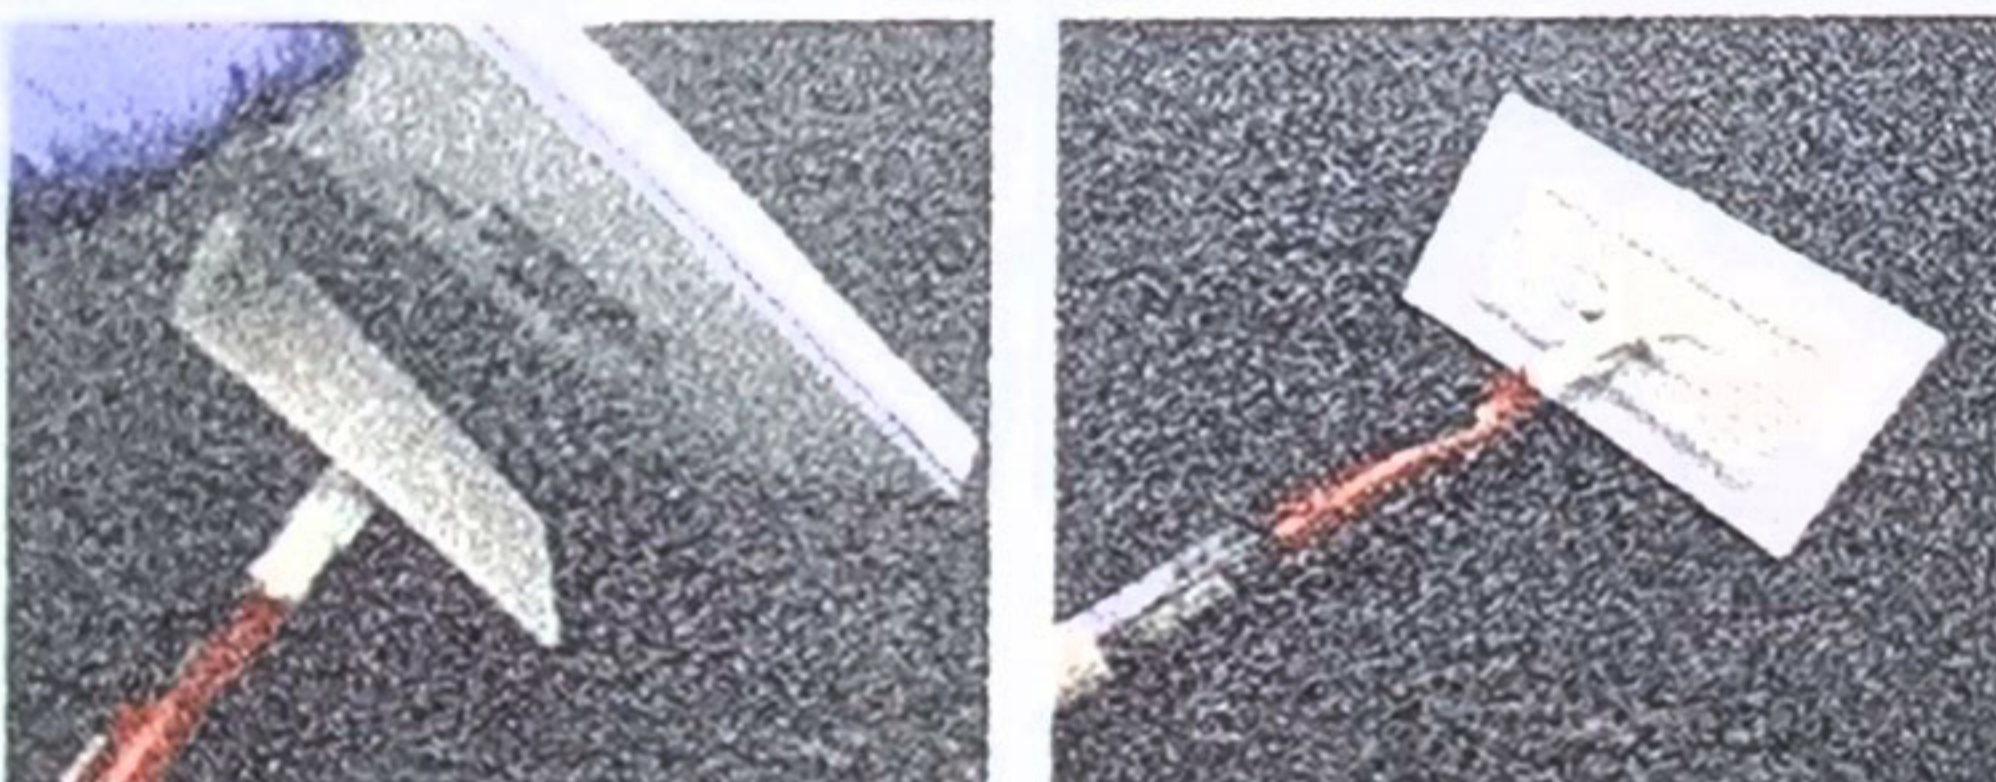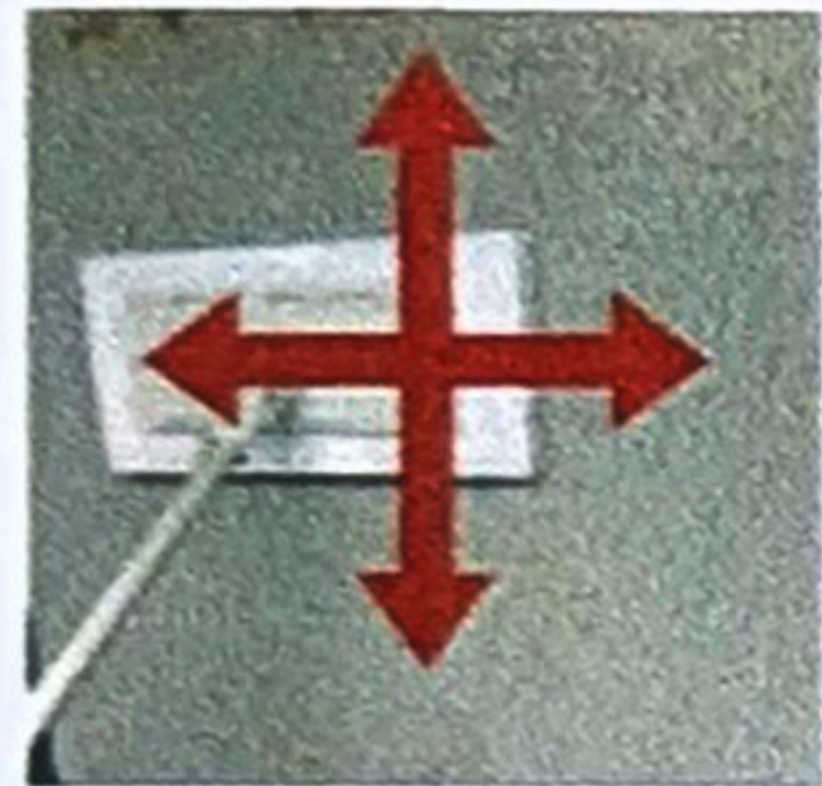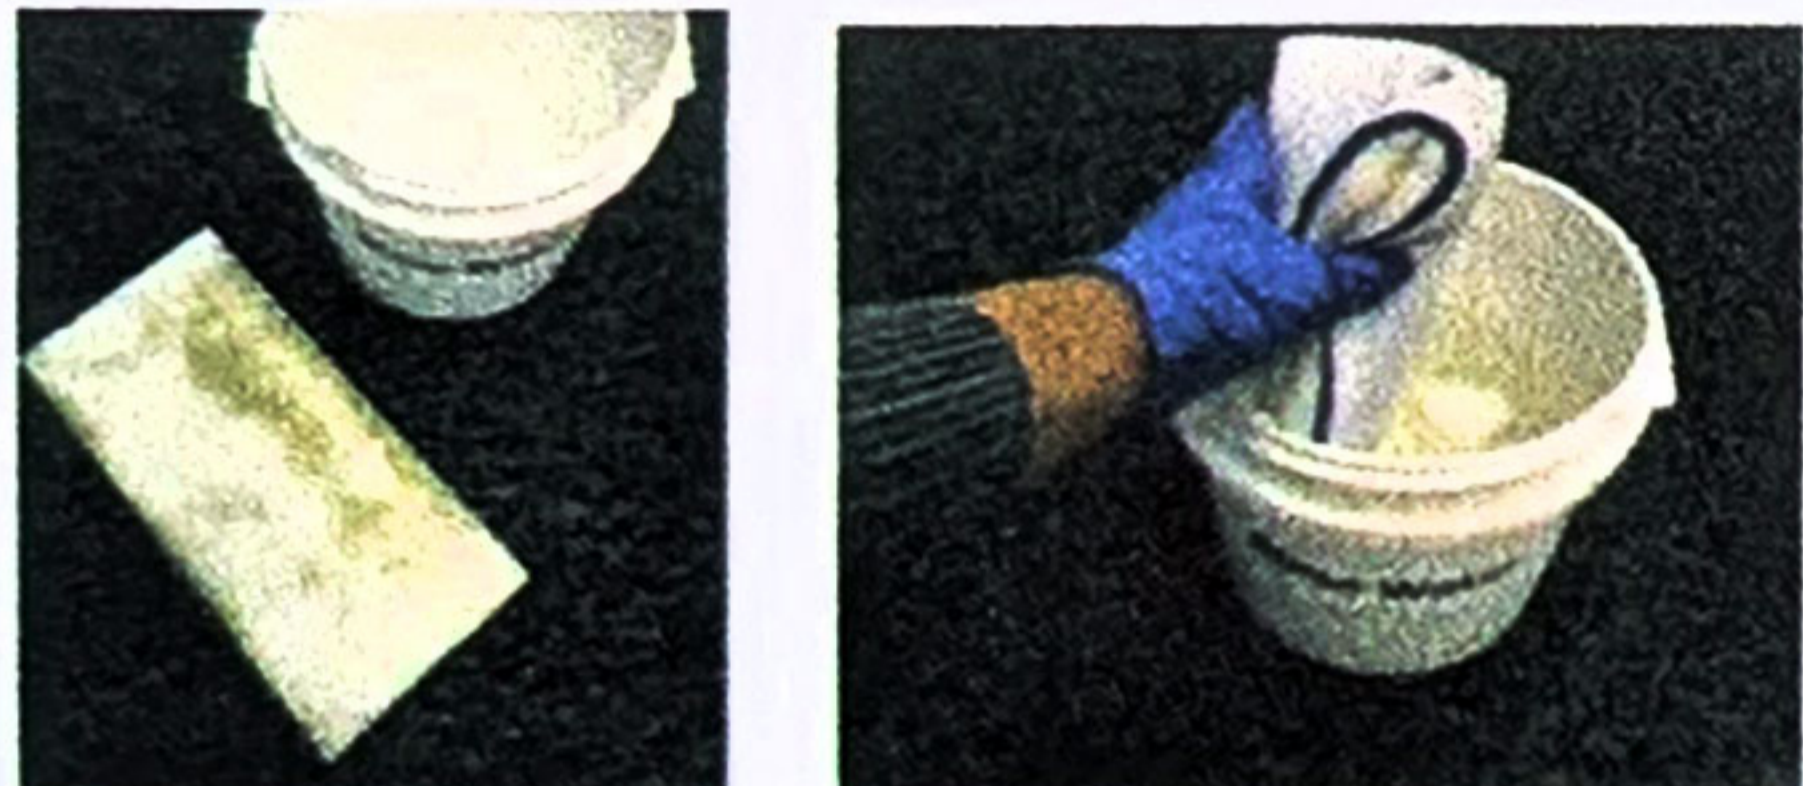


<p>Apply the Topside Cleaning Compound over the area to be cleaned.</p> 	<p>Allow to stand for 2-3 minutes; do not allow to dry completely.</p> 	<p>Dampen cleaning pad.</p> 	<p>Attach Cleaning Pad to Holder.</p> 
<p>Scrub the area in a cross hatch motion or circular motion.</p> 	<p>Periodically rinse cleaning pad to remove spent cleaner and debris.</p> 	<p>Once staining is removed, dampen a clean cotton cloth and wipe the cleaned area to remove all residue.</p> 	

For Tougher Stains

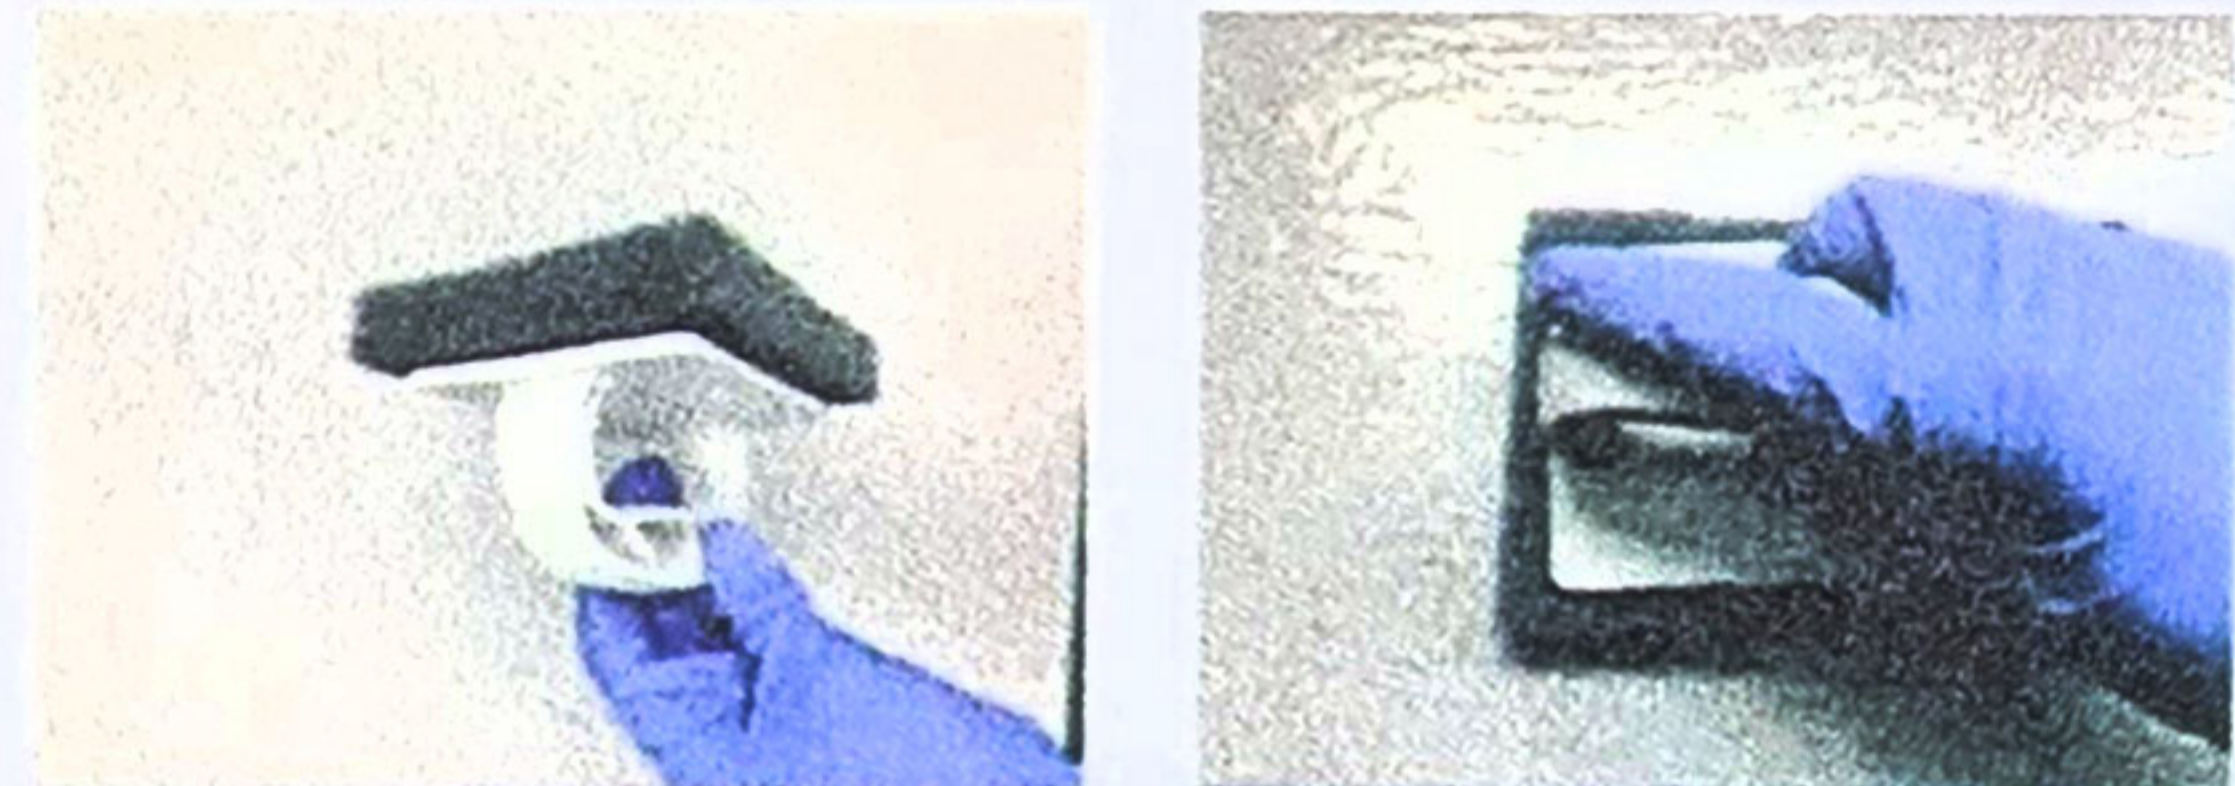Use scour pad to clean tougher stains and complex geometries.



Post-Cleaning Procedure
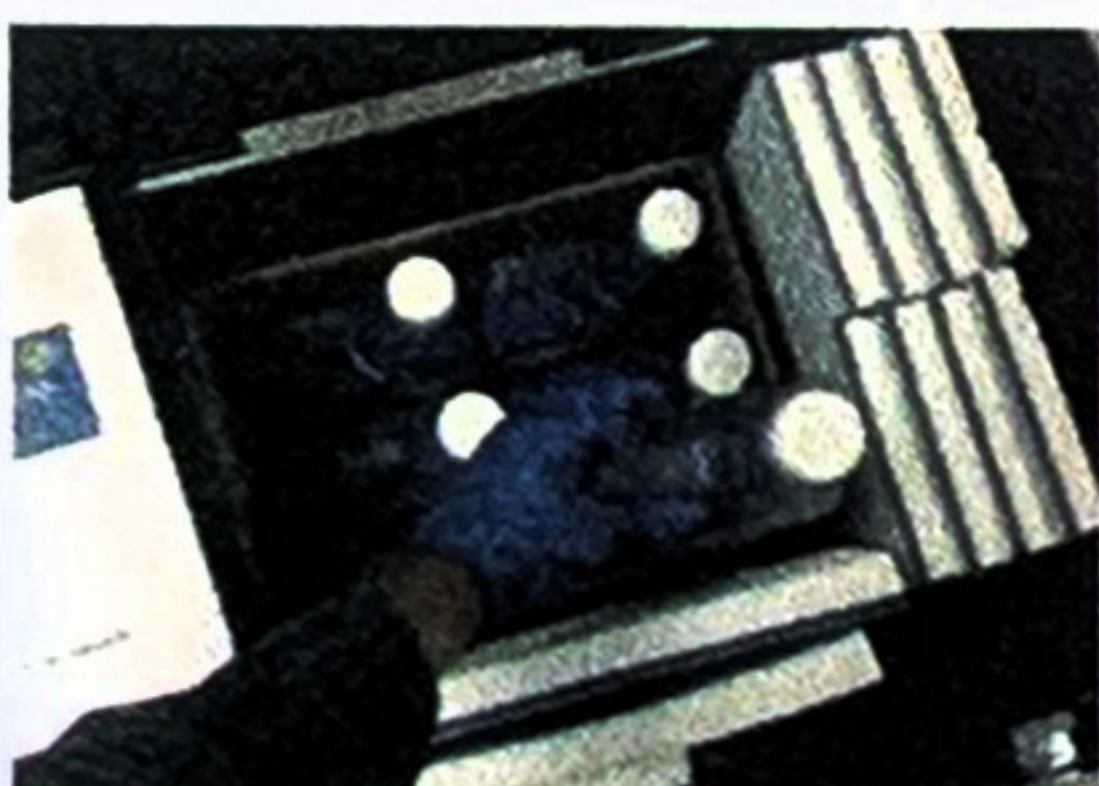
<p>Place all contaminated materials in a trash bag.</p> 	<p>Dispose of IAW local regulations.</p> 	<p>Seal unused Topside Cleaning Compound and place with all unused materials for future use.</p> 
---	--	---